

Removable handle kit fits all Dutton-Lainson Company DLB series brake winches.

Installation Instruction

1. Remove any load from winch and then remove existing nut, spring and handle from winch drive shaft. Keep spring.
2. Thread drive hub (A) all the way onto winch drive shaft.
3. Install spring (B) on shaft, big end first, and thread special nut (C) onto shaft and tighten.
4. Install handle using spring pin to secure in place. Check winch for proper operation.

